




UTILITY BOX INSTALLATION INSTRUCTIONS

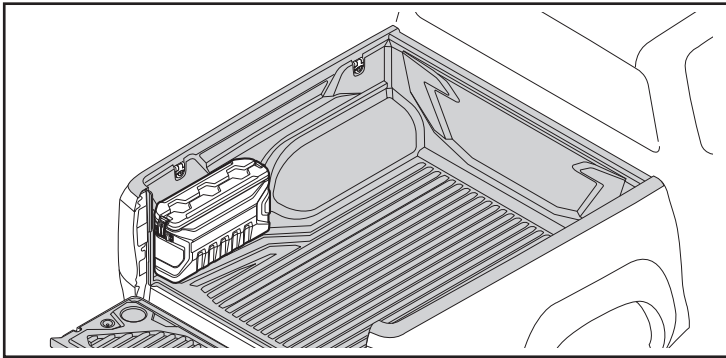


Caution for installation

- Read this mounting manual carefully, before your start the installation.
1. Area where to install product should be clean.
 2. During installation, person who installed should take off any ornaments.


Product name : MAX SIDE BOX
 Model name : ALL MODEL
 Inst. number : L01-0111

Component parts

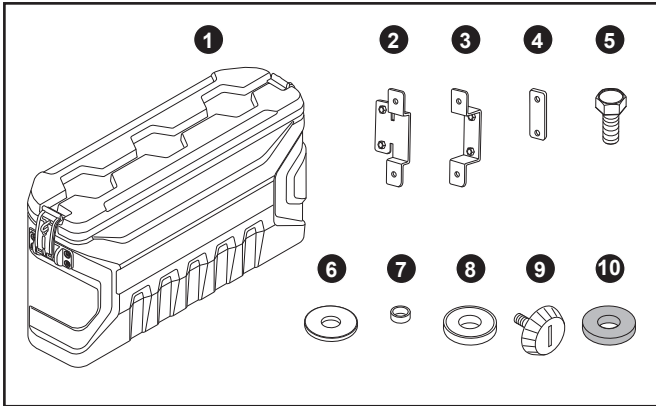



No.	Part name	Q'ty
1.	Max side box	1 Pc.
2.	Bracket A	1 Pc.
3.	Bracket B	1 Pc.
4.	Bracket C	2 Pcs.
5.	Hex bolt M8	4 Pcs.
6.	Plain washer M8	8 Pcs.
7.	Collar	4 Pcs.
8.	PVC washer M8	4 Pcs.
9.	Lashing hook	4 Pcs.
10.	Cushion rubber	16 Pcs.



Tools used

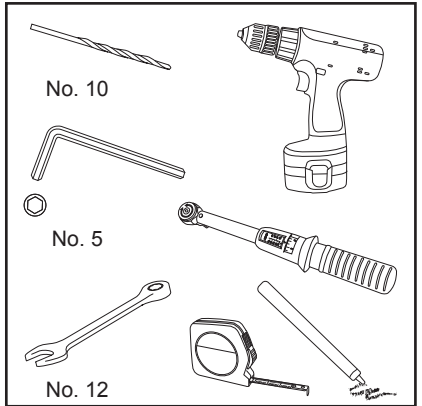

Instruction procedure

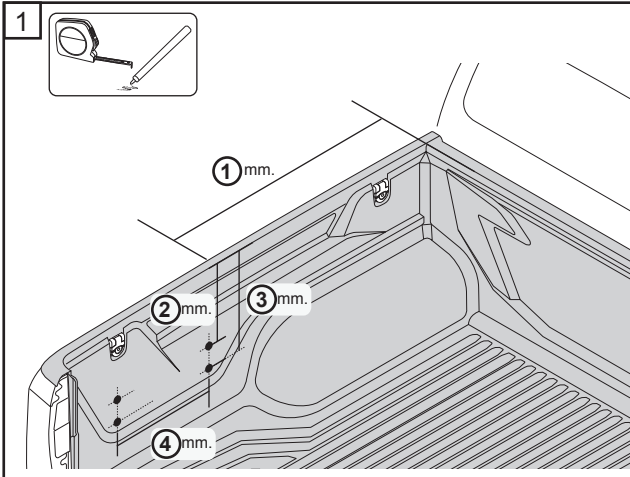

	①	②	③	④
				
CHEVROLET COLORADO 2015	860	245	300	398
ISUZU RT-50 DBC	930	257	312	398
MITSUBISHI DBC 4P00	695	287	342	398
TOYOTA 640A DBC 2015	910	260	315	398
TOYOTA HILUX 2012-2014	885	228	343	398
FORD 2015	832	290	405	398
MAZDA 2015	832	290	405	398
NISSAN 2015	880	252	367	398
VOLKSWAGEN AMAROK 2010	894	273	388	398

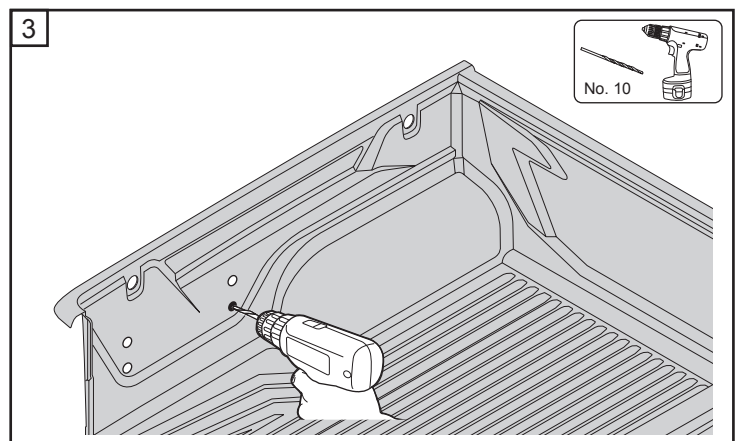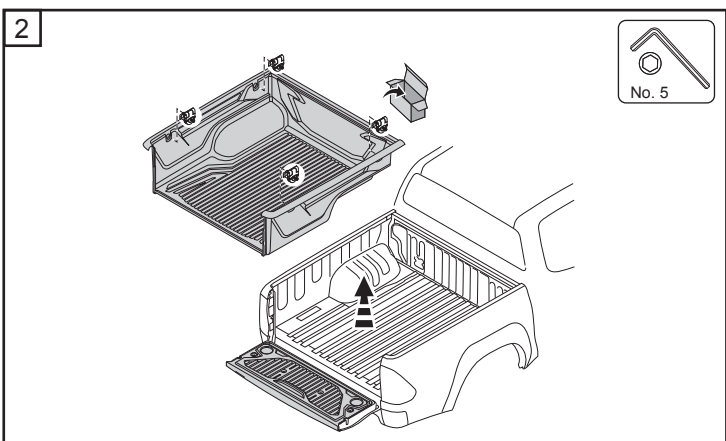

Instruction procedure

4

****10. Cushion rubber**

Bed liner

Bed liner

Bed liner

No. 12

No. 12

for ISUZU RT-50 DBC ONLY**

Amount of **CUSHION RUBBER** for fitting kits

	OEM BEDLINER				MAXLINER (AFTER MARKET)			
	FRONT		REAR		FRONT		REAR	
	TOP	BOTTOM	TOP	BOTTOM	TOP	BOTTOM	TOP	BOTTOM
CHEVROLET COLORADO 2015	3	3	3	3	3	3	3	3
ISUZU RT-50 DBC	0	0	0	0	0	0	0	0
MITSUBISHI DBC 4P00	3	3	3	3	0	0	0	0
TOYOTA 640A DBC 2015	4	4	4	4	4	4	4	4
TOYOTA HILUX 2012-2014	0	0	0	0	0	0	0	0
FORD 2015	-	-	-	-	4	4	4	4
MAZDA 2015	-	-	-	-	4	4	4	4
NISSAN 2015	4	4	4	4	4	4	4	4
VOLKSWAGEN AMAROK 2010	4	4	4	4	4	4	4	4

